

There are two fuse boxes, under the fascia and in the engine compartment.




### Fascia fuses

To access the fuses under the fascia (to the right of the driver), turn the two knobs on the cover by one quarter of a turn.

### Fuse chart and table

See following pages.

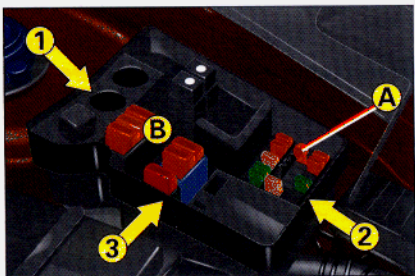

### Engine compartment fuses

To access the fuse box in the engine compartment (next to the front left wheel arch), unclip the cover in the sequence shown in the diagram.

**At the end of the operation, close the cover very carefully.**

 
### WARNING

**Operations on the MAXI second-level protection fuses, located at B, must be carried out by an approved dealer.**

### Fuse chart and table

See following pages.


Correct



Incorrect



 Pliers A



### Removing and inserting a fuse


Before changing a fuse, it is necessary to know and correct the cause of the incident. The fuse numbers are marked on the fuse box.

**Always replace a faulty fuse with a fuse of the same amperage.**

Use the special pliers **A** provided on the fuse box.

# TABLE OF FUSES

(According to model or country)

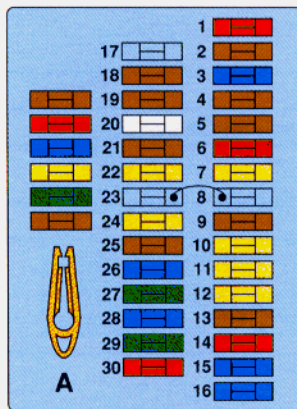

### Fuse box under the dashboard

The unmarked fuses are spare fuses.

**Always replace a blown fuse with a fuse of the same amperage.**

Fuse	Amperage	Supply type	Functions protected
F1	10 A	+ve Accessories	Radio.
F1 A		+ve Battery	
F2	5 A	ignition on	PRND gear selector gate supply - Diagnostic socket - Lights-on audible warning
F3	20 A	ignition on	Relay box supply - ECU - Vacuum pump
F4	5 A	+ve sidelamps	Front LH parking lamp - Lights-on audible warning - Rear RH parking lamp
F5	10 A	ignition off	Fan (low speed)
F6	10 A	ignition off	Spare
F7	10 A	+ve Battery	Horn - Diagnostic socket
F8	—	shunt	Fuse location for permanent consumer cut-off
F9	5 A	+ve sidelamps	Front RH parking lamp - Rear LH parking lamp - LH/RH number plate
F10	20 A	+ve Battery	Electric window One-touch unit supply
F11	20 A	+ve Battery	RH electric window
F12	10 A	ignition on	Relay control - Power steering - Instrument panel - Heater control
F13	5 A	+ve Battery	LH electric window
F14	10 A	+ve Battery via shunt	High Frequency plip receiver




# TABLE OF FUSES

(According to model or country)

Fuse	Amperage	Supply type	Functions protected
F15	15 A	+ve Battery	Central locking unit
F16	15 A	+ve Battery	Cigar lighter
F16A		+ve Accessories	
F17	20 A	E / S	Fan (high speed)
F18	5 A	+ve Parking lamps	Rear foglamp + warning lamp
F19	5 A	+ve Sidelamps	Instrument panel lighting - Switches - Ashtray Radio - Heating/ventilation control
F20	25 A	ignition off	Heating/ventilation blower
F21	5 A	ignition off	Heated rear screen switch - Heated rear screen timer
F22	20 A	+ve Accessories	Rear screen wiper motor (left/right) - Rear screen wiper timer
F23	—	+ve battery via shunt	Fuse location for permanent consumer cut-off
F24	20 A	+ve Accessories	Windscreen wiper Windscreen wiper motor
F25	5 A	+ve Battery	Front/rear interior lighting - Instrument panel supply - Radio (memory)
F26	15 A	+ve Battery	Hazard warning lamps switch
F27	30 A	+ve Battery	Heated rear screen Heated rear view mirror
F28	15 A	+ve Accessories	Electric rear view mirror - Windscreen wiper timer
F29	—	+ve Battery	Spare
F30	10 A	+ve Accessories	Map reading lamp - Direction indicators - HF receiver - Instrument panel

# TABLE OF FUSES

(According to model or country)

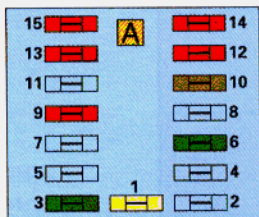

### Motor compartment fuses

Remove the cover. The unmarked fuses are spares.

After changing the fuse, close the cover very carefully.

Fuse	Amperage	Supply type	Functions protected
F1	—	+ve Battery	Spare
F2	40 A	+ve Battery	Relay box
F3	—	+ve Battery	Spare
F4	15 A	+ve Battery	Additional heating
F5	—	+ve Battery	Spare
F6		+ve Battery	Spare
F7	—	+ve Battery	Spare
F8	5 A	+ve Battery	Charging flap ECU
F9	10 A		Coolant pump
F10	5 A		Info + starter
F11	10 A		Fan
F12	10 A		LH main beam
F13	10 A		RH main beam
F14	10 A		LH dipped beam
F15	10 A		RH dipped beam



## BULB CHART

FRONT	
Headlamps	H4 Halogen 60/55 W
Side lamps	W 5 W
Direction indicators	PY 21 W - Orange bulb
Direction indicator side repeaters	W 5 W
REAR	
Brake and side lamps	P 21 / 5 W
Direction indicators	PY 21 W - Orange bulb
Reversing lamps	P 21 W
Rear fog lamp	P 21 W
Number plate lamps	W 5 W
Additional brake lamp (Third brake lamp)	W 5 W
INTERIOR	
Courtesy lamps	W 5 W